


# CURRENT PRODUCTS model:GPS708

## VTR SYSTEM SWITCHER

### REAR PANEL

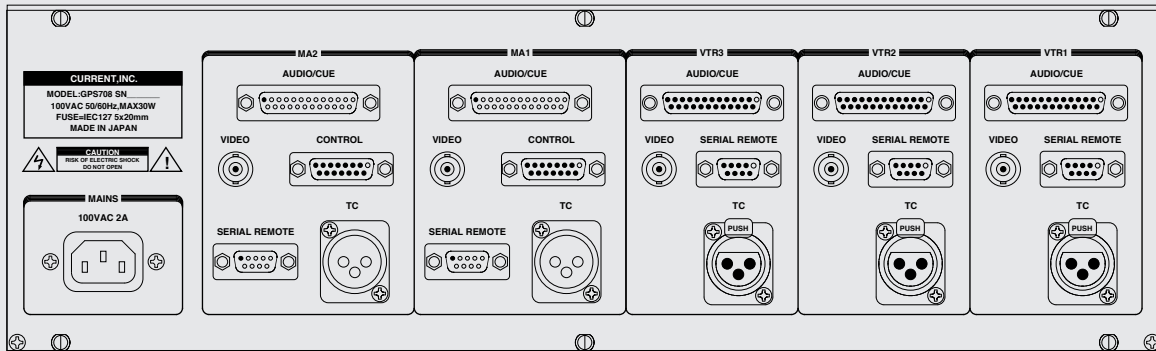

System switcher of 2:3  
 9P remote switch  
 Audio 8ch switch  
 Video switch  
 Timecode switch  
 19 inches 3U size

**GPS708 is a system switcher to share 3 VTR in 2 control room, and 9P remote, an audio of 8 channel, a video of 1 channel, a switch of the timecode are possible.**

#### "Switching"

A signal switch of GPS708 is all pin switches by the relay and does not choose a connected model and a signal. In addition, without a noise by the switching, it can ignore most of the signal loss, too.

#### "Control"

It is standard specifications to make by remote control from switch panel of the external, and the switch control of GPS708 is optional and can mount a switch to main frame front panel.

#### "Exclusion processing"

GPS708 is given priority to taking in advance and cannot choose the VTR chosen in the other room on the other if the room does not release selection. It outputs own switch and a tarry and a tarry when target chooses you to the remote connector to every room.

#### "Others"

Please refer about the system switcher of different specifications.

### SPECIFICATIONS

- 🍏 VTR 1,2,3 AUDIO: Dsub25-F(#4-40)
- 🍏 VTR 1,2,3 9P REMOTE: Dsub9-F(#4-40)
- 🍏 VTR 1,2,3 VIDEO: BNC 75Ω
- 🍏 VTR 1,2,3 TC: XLR3-F
- 🍏 CONTROL ROOM AUDIO: Dsub25-M(#4-40)
- 🍏 CONTROL ROOM 9P REMOTE: Dsub9-M(#4-40)
- 🍏 CONTROL ROOM VIDEO: BNC 75Ω
- 🍏 CONTROL ROOM TC: XLR3-M
- 🍏 CONTROL ROOM REMOTE: Dsub25-F(#4-40)
- 🍏 CONTROL REMOTE TALLY: COMMON=+5VDC
- 🍏 MAINS:100VAC 50/60Hz, MAX=50W
- 🍏 DIMENSIONS: 483Wx132.5Hx350D, 8kg

System switcher	GPS708	¥720,000
accessory : AC cable		

# GPS708 "MA1/2 CONTROL" Dsub15-F(#4-40)

Ribbon	Hard	Signal name	Designation	Active
1	1	SW COM	SWITCHES COMMON	0V
2	9	LP COM	LAMPS COMMON	+5V DC
3	2	SW1-1	VTR-1 SELECT SWITCH for MA-1	Lo
4	10	LP1-1	VTR-1 SELECTED TALLY for MA-1 MAX=50mA	Lo (O.C.)
5	3	SW1-2	VTR-2 SELECT SWITCH for MA-1	Lo
6	11	LP1-2	VTR-2 SELECTED TALLY for MA-1 MAX=50mA	Lo (O.C.)
7	4	SW1-3	VTR-3 SELECT SWITCH for MA-1	Lo
8	12	LP1-3	VTR-3 SELECTED TALLY for MA-1 MAX=50mA	Lo (O.C.)
9	5	SW2-1	VTR-1 SELECT SWITCH for MA-2	Lo
10	13	LP2-1	VTR-1 SELECTED TALLY for MA-2 MAX=50mA	Lo (O.C.)
11	6	SW2-2	VTR-2 SELECT SWITCH for MA-2	Lo
12	14	LP2-2	VTR-2 SELECTED TALLY for MA-2 MAX=50mA	Lo (O.C.)
13	7	SW2-3	VTR-3 SELECT SWITCH for MA-2	Lo
14	15	LP2-3	VTR-3 SELECTED TALLY for MA-2 MAX=50mA	Lo (O.C.)
15	8	NC	No CONNECTION	

注意！ Dサブコネクタの接続はHardピン番号で接続してください。

CAUTION! D-Connector for wiring refer to Hard pin number Description.

Mounting screw for D-connector use #4-40 screw.

## GPS708 "MA1/2 AUDIO/CUE" Dsub25-M(#4-40)

Ribbon	Hard	Signal name	Designation	Active
1	1	AUDIO 1+	AUDIO LINE 1 +	
2	14	AUDIO 1-	AUDIO LINE 1 -	
3	2	AUDIO 1G	AUDIO LINE 1 GND	
4	15	AUDIO 2+	AUDIO LINE 2 +	
5	3	AUDIO 2-	AUDIO LINE 2 -	
6	16	AUDIO 2G	AUDIO LINE 2 GND	
7	4	AUDIO 3+	AUDIO LINE 3 +	
8	17	AUDIO 3-	AUDIO LINE 3 -	
9	5	AUDIO 3G	AUDIO LINE 3 GND	
10	18	AUDIO 4+	AUDIO LINE 4 +	
11	6	AUDIO 4-	AUDIO LINE 4 -	
12	19	AUDIO 4G	AUDIO LINE 4 GND	
13	7	AUDIO 5+	AUDIO LINE 5 +	
14	20	AUDIO 5-	AUDIO LINE 5 -	
15	8	AUDIO 5G	AUDIO LINE 5 GND	
16	21	AUDIO 6+	AUDIO LINE 6 +	
17	9	AUDIO 6-	AUDIO LINE 6 -	
18	22	AUDIO 6G	AUDIO LINE 6 GND	
19	10	AUDIO 7+	AUDIO LINE 7 +	
20	23	AUDIO 7-	AUDIO LINE 7 -	
21	11	AUDIO 7G	AUDIO LINE 7 GND	
22	24	AUDIO 8+	AUDIO LINE 8 +	
23	12	AUDIO 8-	AUDIO LINE 8 -	
24	25	AUDIO 8G	AUDIO LINE 8 GND	
25	13	NC	No Connection	

## GPS708 "MA1/2 Serial REMOTE" Dsub9-M(#4-40)

1	1	S-1	GND	
2	6	S-2	GND	
3	2	S-3	TX-B	
4	7	S-4	TX-A	
5	3	S-5	RX-A	
6	8	S-6	RX-B	
7	4	S-7	GND	
8	9	S-8	GND	
9	5	S-9	SPARE LINE	

注意！ Dサブコネクタの接続はHardピン番号で接続してください。

CAUTION! D-Connector for wiring refer to Hard pin number Description.

Mounting screw for D-connector use #4-40 screw.

## GPS708 "VTR 1-3 AUDIO/CUE" Dsub25-F(#4-40)

Ribbon	Hard	Signal name	Designation	Active
1	1	AUDIO 1+	AUDIO LINE 1 +	
2	14	AUDIO 1-	AUDIO LINE 1 -	
3	2	AUDIO 1G	AUDIO LINE 1 GND	
4	15	AUDIO 2+	AUDIO LINE 2 +	
5	3	AUDIO 2-	AUDIO LINE 2 -	
6	16	AUDIO 2G	AUDIO LINE 2 GND	
7	4	AUDIO 3+	AUDIO LINE 3 +	
8	17	AUDIO 3-	AUDIO LINE 3 -	
9	5	AUDIO 3G	AUDIO LINE 3 GND	
10	18	AUDIO 4+	AUDIO LINE 4 +	
11	6	AUDIO 4-	AUDIO LINE 4 -	
12	19	AUDIO 4G	AUDIO LINE 4 GND	
13	7	AUDIO 5+	AUDIO LINE 5 +	
14	20	AUDIO 5-	AUDIO LINE 5 -	
15	8	AUDIO 5G	AUDIO LINE 5 GND	
16	21	AUDIO 6+	AUDIO LINE 6 +	
17	9	AUDIO 6-	AUDIO LINE 6 -	
18	22	AUDIO 6G	AUDIO LINE 6 GND	
19	10	AUDIO 7+	AUDIO LINE 7 +	
20	23	AUDIO 7-	AUDIO LINE 7 -	
21	11	AUDIO 7G	AUDIO LINE 7 GND	
22	24	AUDIO 8+	AUDIO LINE 8 +	
23	12	AUDIO 8-	AUDIO LINE 8 -	
24	25	AUDIO 8G	AUDIO LINE 8 GND	
25	13	NC	No Connection	

## GPS708 "VTR 1-3 Serial Remote" Dsub9-F(#4-40)

1	1	S-1	GND	
2	6	S-2	GND	
3	2	S-3	TX-B	
4	7	S-4	TX-A	
5	3	S-5	RX-A	
6	8	S-6	RX-B	
7	4	S-7	GND	
8	9	S-8	GND	
9	5	S-9	SPARE LINE	

注意！ Dサブコネクタの接続はHardピン番号で接続してください。

CAUTION! D-Connector for wiring refer to Hard pin number Description.

Mounting screw for D-connector use #4-40 screw.